



3 D-Ring Dielectric/Flame Resistant Full Body Harness (FBH) Instruction/Specification manual 2017

ENGLISH
VERSION

Material Specification

Material: Modified Ester Amide 1-3/4(45mm)

Min. Tensile Strength: 6,000lb(27kN).

Hardware: ANSI Z359.1-07. Polymer coated 13kV resistance.

Buckles: Chest/Leg strap pass through.

Shoulder strap friction buckles.

D-Rings: Min. Strength 5,000lb(22kN).

Model Type: Deluxe AF-6175 Padded frame. Pro AF-6176 Fig.1.

Stretch in a Fall: 12.0" Max. with proper adjustment.

Compliance

ANSI Z-359.11-14/OSHA 1926:502

Arc-Flash: Kinectrics Lab Inc. certified

to pass ASTM F887-13 section 22.8.

Adjusting Harness for a Snug Fit

- 1) Don the harness to determine the dorsal D-ring position. Adjust D-ring 6-12" below the shoulders by sliding the webbing through the D-pad slots. See Fig.1.
- 2) Connect chest strap buckle and adjust the width so straps are aligned as shown at Fig.2. Adjust the height by moving the webbing through the slots in the chest strap adjusters. The chest strap should be about 12"(300mm) below the shoulders.
- 3) Connect and adjust leg straps for a snug fit.
- 4) Adjust harness length with shoulder strap adjuster buckles shown at Fig.5.

WARNING!

Failure to adjust the harness properly can result in falling out of the harness in the event of a free fall.

Connecting PPE to a Harness

For fall arrest, connect an energy absorber to the dorsal D-ring only. Attach a lifeline, lanyard or SRL (self retracting lifeline) to the opposite end of the energy absorber. For work positioning, connect lanyard or SRL to one of the side D-rings.

WARNINGS!

- 1) **DO NOT** attach lifeline directly to the Dorsal D-ring unless reverse rigged as specified in SAS Reverse Rigging Manual.
- 2) **DO NOT** attach lifeline, lanyard, absorber or SRL directly to the harness webbing.

Energy Absorber Required

For Fall Arrest use, an ANSI or CSA compliant energy absorber specified for the user's weight is required.

SAS mfg. Energy Absorbers

Type / Model / Color Max.	User Wt.	MAF	Elongation	Compliance
E-4: I6061(k) Black	130-310lb(59-140kg)	900lb(4kN)	42"(1.06m)	ANSI Z359.1-07
E-6: IV6061 Orange	200-340lb(90-154kg)	1,300lb(6kN)	69"(1.75m)	CSA Z259.11-05

Service Life/Inspection Recommendations

Service life begins with first use and depends on the frequency of use, exposure to UV, welding sparks, steel grinding, and abrasive or corrosive construction materials such as gypsum, concrete dust, or sandblasting.

Type of Use	Inspection Frequency	Approx. Service Life
Daily use	Before each use.	△ 3-months
Moderate		△ 6 months
Light use		△ Annually
		5 years

△ = Inspected by a competent person.

Component Compatibility

SAS supplied PPE is ensured for "component compatibility" by following the instruction manuals for each type of equipment used. When used with components manufactured by others, compatibility must be ensured by a "Competent" person*.

* See OSHA definition.

Specification of Use

One person use for personal Fall Arrest or Work Positioning.

Max. User Wt: 340lb(154kg), including tools.

Dielectric Specification:

Flame resistant webbing w/electrical resistant D-rings and buckles.


Note: **SAS** used in this manual

=Super Anchor Safety

⊗ = Inspection Points from pg.2.

Fig.1

AF Pro 6176k
3-D Harness

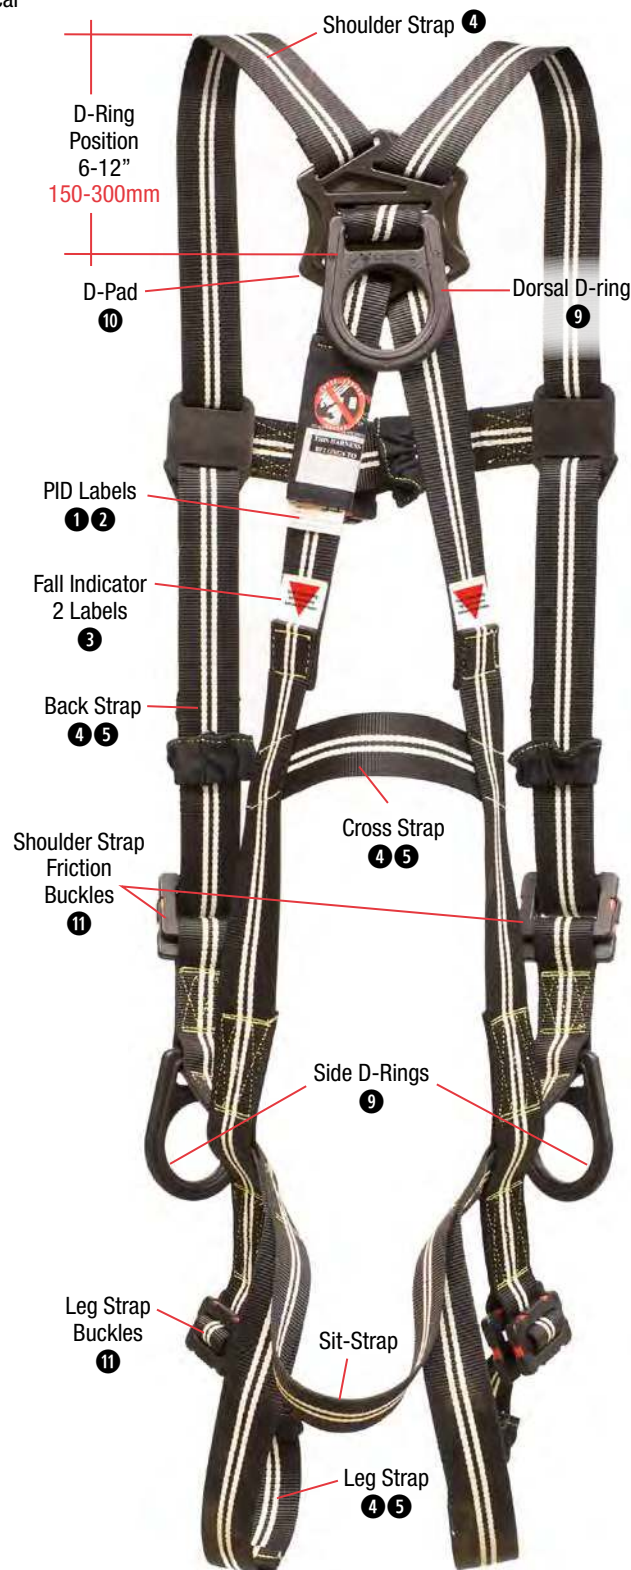

Inspect Before Each Use!

The following inspection points are a guideline of common conditions that occur as a result of abuse, poor maintenance, service damage or long service life. SAS recommends equipment users to draft their own Inspection/Maintenance program and inspect before each use, and a minimum of once a year by a competent person. Record inspections on the harness Matrix label.

Remove equipment from service if any of the following conditions are present:

⊗= Inspection points **ACTION REQUIRED:** ☒=Remove ☑=SAS Factory Repair

WARNING! ANSI-CSA and OSHA require that a harness subjected to a free fall must be removed from service immediately and disposed of in a way that prevents further use. ☒

- 1 Has not been inspected annually. ☒
Check inspection label for data entry.
- 2 Warning labels missing or not legible. ☒
- 3 Fall Indicator label/s are missing, or warning is visible. ☒ See Figs.7-8
- 4 Webbing cut, abraded, damaged by heat or chemicals. ☒
- 5 Webbing stitches cut or loose. ☒
Inspect all box and cross stitches. Fig.3
- 6 Chest strap adjuster pad is missing or webbing slots are broken. ☒ Fig.3
- 7 Webbing end terminations damaged or missing. ☒ Fig. 5
- 8 Webbing keepers missing or damaged. ☒ ☑ May be replace with SAS supplied replacement keepers.
- 9 D-ring is deformed, cut, or polymer coating is worn and metal is exposed. ☒ Fig.6
- 10 D-Pad is cut, torn, or webbing slots are broken. ☒ Fig.2
- 11 Buckles are missing, cut, or polymer coating is worn and metal is exposed. ☒

Fig.3 Pass Through Buckles

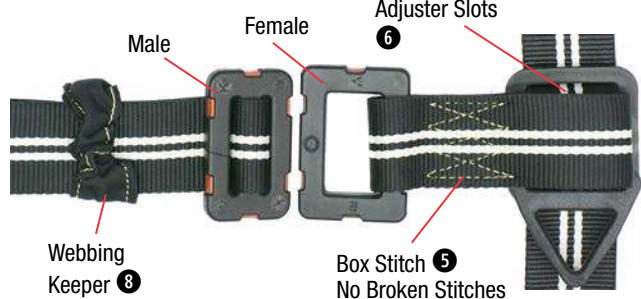


Fig.5

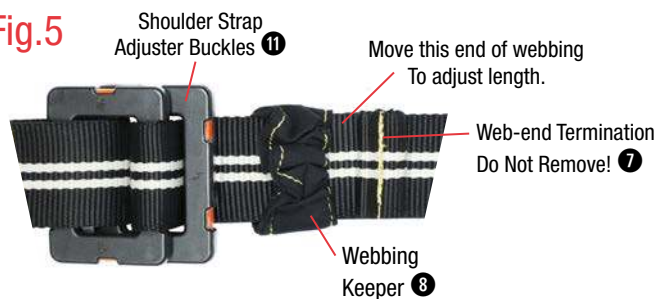


Fig.6

Polymer coated D-ring. Inspect all sides/edges for exposed metal.



WARNING!
If D-ring or buckles have exposed metal remove from service.

Fig.7

Fall Indicator Label not deployed. Warning not visible.



Fig.8

Fall Indicator deployed. Warning is visible.



Remove harness from service.

Storage/Maintenance


Hang harness in dry area. Never store wet. Clean only with mild detergent, soft bristle brush or compressed air. Do not use bleach or corrosive cleaning materials.

DO NOT expose webbing to:

- Open flame
- High heat
- Sharp edges
- Cutting tools or grinders
- Acids, chemicals, solvents or petroleum

WARNING!

Storing wet will cause mildew, resulting in damage to webbing and stitching.

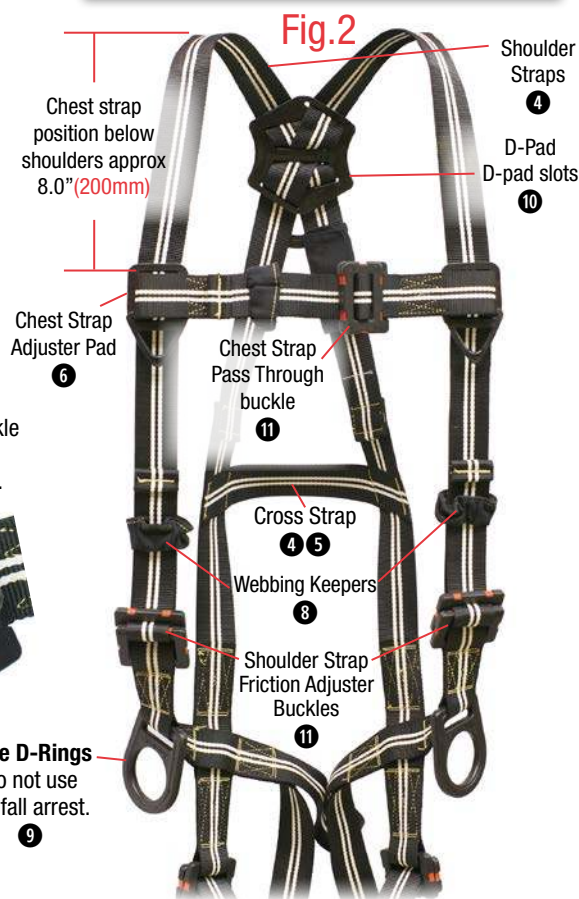

Product I.D.(PID) and Inspection Labels

Harness Label

Date of mfg.

Mfg. Super Anchor Safety
1429 4th St. SE
Monroe, WA 98272 USA

Material: **Material**
Modified Ester Amide

Model: **Modelo**
Pro-AF No. 6176K

Connectors: 13KV Resistance

Property of:

DOM / OF / FOR
VIN-A/6

Meets / Cumple
ANSI Z359.1-07/OSHA 1926-502
ASTM F887-13 Arc-Flash

Person Capacity: **Persona Capacidad**

Maximum capacity of harness per person is specified by the energy absorber or SRL being used and must not exceed 940lbs.

La capacidad máxima del arnés por persona está especificada por el absorbente de energía o SRL que se utiliza y no debe superar 154kg.

Class / Clase
Fall Arrest
Full Body Harness

Arnés de Protección
Contra Caída

Work Positioning
Posición estacionaria

Size / Tamaño
Universal / Unifalla

AF Harness-Label E.E. 03-2017 © SCN
Mfg. India

Template T01-04-2016

Instruction Label

English

USER SHALL COMPLY WITH SAFETY STANDARDS WHEN USING THIS EQUIPMENT!

Harness Stretch: (xs)= 12"/(300mm)
Max Free Fall: 6ft.(1.8m)
Anchorage Point: 5,000(22.5kN) or 2x fall protection load when safety standards allow.
Hardware: Meets: ANSI/CSA.

WARNING: Read Instruction manual. Inspect equipment and perform function tests before each use. Remove defective equipment from service.

FALL INDICATORS: If warning is visible remove from service. **Maintenance:** Keep away from open flame. Do not store wet. **Size Adjustment:** Position D-Ring no lower than 12"(300mm) from top of shoulder adjust leg, shoulder and chest straps for a snug fit.

WARNING: Improperly adjusted harness may result in serious injury or death if a fall occurs.

Length of Fall: Consult manual to calculate free fall length.

RESCUE: Prolonged suspension may result in death. Evacuate immediately!

Harn-Label C.2:English © Scn 04-2017

Template HA.2-08-2016

Instruction Label

Spanish

¡LOS USUARIOS DEBERÁN ACATAR LAS NORMAS DE SEGURIDAD AL UTILIZAR ESTE EQUIPO!

Alcance del Arnés = 12"/(300mm)
Distancia Máxima de Caída Libre: 6 pies (1.8m)
Punto de Anclaje: 5,000 libras (22.5kN) o 2x la carga de protección de caída cuando las normas de seguridad lo permitan.
Armamento: Cumple con: ANSI / CSA.

ADVERTENCIA: Lea el Manual de instrucciones, inspeccione el equipo y lleve a cabo las pruebas de función antes de cada uso. Remueva el equipo defectuoso del servicio.

INDICADORES DE CAÍDA: Si la advertencia es visible remueva de circulación. **Mantenimiento:** Mantener alejado de flamas. No almacenar mojado.

Ajuste de tamaño: Posicione el Anillo-D no mas abajo de 12"(300mm) desde la parte superior del hombro. Ajuste las correas de la pierna, del hombro y el pecho a un buen ajuste. **ADVERTENCIA:** El arnés ajustado incorrectamente puede ocasionar lesiones graves o la muerte si se produce una caída. **Duración de la caída:** Consulte el manual para calcular la caída libre.

RESCATE: La suspensión prolongada puede causar la muerte. Evacuar inmediatamente!

Harn-Label C.2:Spanish © Scn 04-2017

Template HA.2-08-2016

Matrix Inspection

Label 1

Super Anchor Safety
Monroe, WA 98272

Serial Number:
Número de serie:
KAR

M/Y - M/A	17	18	19	20	21	22
01						
02						
03						
04						
05						
06						
07						
08						
09						
10						
11						
12						

Serial No.

WARNING TO USER!
You are required to read and use the instruction/specification manual supplied at the time this device was shipped. Improper use and installation can result in serious injury or death.

MISE EN GARDE !
VOUS DEVEZ LIRE ET UTILISER LE MANUEL D'INSTRUCTIONS/DE SPECIFICATIONS FOURNI AVEC LE L'ENVOI DU DISPOSITIF. UNE MAUVAISE UTILISATION ANSÍ QU'UNE MAUVAISE INSTALLATION PEUVENT OCCASIONNER DES BLESSURES SÉRIEUSES OU CAUSER LA MORT.

ADVERTENCIA AL USUARIO!
Usted debe leer y utilizar el Manual de Instrucciones/ Especificaciones suministrado en el momento en que se envió este dispositivo. El uso y la instalación inadecuados pueden resultar en lesiones graves o la muerte.

Harness Matrix Label D.1 © Scn 01-2017

Template HA.2-08-2016