



SUPER ANCHOR SAFETY®

SideWinder3™ SRL Addendum Instruction/Specification Manual 2020

ENGLISH
VERSION

!WARNING TO USER!
You are required to read and use the Instruction/ Specification manual supplied at the time this device was shipped. Improper use and installation can result in serious injury or death. Follow inspection requirements before each use.

Addendum Notice!

Use of SideWinder3 requires to use the SideWinder2-SideWinder3, 03-2020 Instruction/Specification manual included with this SRL at time of shipping. Performance specifications are identical for both models.

User Specifications

Max. User wt.: 130-310lb(59-140kg)

Max. Arrest Distance: 24"(610mm)

Max. Free Fall: 24"(610mm)

Performance Specifications

Avg. Arrest force: 1,350lb(6kN)

Max. Arrest force: 1,800lb(8kN)

Brake System: Centrifugal, 100% sst.

Casing: Aluminum anodized

Casing Covers: 304 stainless steel

Compliance

ANSI Z359.14-2012 Type A
OSHA 1926.502

Part No. Length Wt.

2904B 20ft 14lb

2903B 30ft 16lb

⊗ Inspection Points consult
SideWinder2 manual pg.2

PID Labels English

Lot mfg. Date Serial No. First Service Mfg. Super Anchor Safety
Monroe, WA USA 98272
www.superanchor.com

Model Length Factory Service

Compliance: ANSI Z359.14-12 Class A
OSHA 1926.502

User/Specifications
Max. User wt. 310lb
Max. Arrest Distance: 24"
Max. Free Fall: 24"

Energy Absorbing Specifications:
Avg. Arrest Force: 1,350lb
Max. Arrest Force: 1,800lb
Material Specifications:
Casing: Aluminum/SST
Braking System: Stainless Steel
Cable: 3/16" d. Galv.

!WARNING TO USER!
You are required to read and use the Instruction/Specification manual supplied at the time this device was shipped. Improper use and installation can result in serious injury or death. Follow inspection requirements before each use.

SRL Label F-7.0 ©SCN 02-2020 mfg. Taiwan [MIT]
Template: SRL 7.0

HAZARDS!
• DO NOT allow cable to come in contact with metal edges, sharp or abrasive surfaces. DO NOT wrap the cable around any object.
• DO NOT expose SRL to high heat, open flame, cutting or grinding tools or electrical sources.
• Avoid swing fall hazards by keeping the service angle to less than 40°.

BEFORE EACH USE:
Perform locking and retraction tests as specified in the manual.

Inspect and remove from service if any of the following conditions are present:
• Does not pass inspections or locking test.
• Cable has cuts, kinks, abrasions or broken strands.
• Snaphook fall indicator is deployed.
• Casing or handle is cracked or broken.
• Labels are missing or not readable.

Storage, Maintenance, Use:
• DO NOT allow the cable to retract without tension serious damage will result.
• Inspect by a competent person every 6 months.

Date SRL was shipped
from SAS factory
MM-YYYY

Date SAS factory
repair or service
was performed.
(Label will be replaced)

Spanish

Usuarios/Especificaciones
Peso máximo del usuario: 140kg
Distancia máxima de detención: 610mm
Caída libre máxima: 610mm

Especificaciones de Amortiguación de Energía:
Fuerza promedio de detención: 6kN
Fuerza máxima de detención: 8kN
Especificaciones de los materiales:
Carcazas: Aluminio/SST
Sistema de Frenado: Acero Inoxidable
Cable: Diámetro 4.7mm. Acier galvanizado

!ADVERTENCIA AL USUARIO!
Usted debe leer y utilizar el Manual de Instrucciones/ Especificaciones despachado con el suministro de este dispositivo. El uso y la instalación incorrectos pueden resultar en lesiones graves o la muerte. Siga los requisitos de inspección antes de cada uso.

!ADVERTENCIA!
No abra la carcasa ni trate de realizar alguna reparación. Este dispositivo cuenta con un resorte interno que puede lesionar gravemente a una persona. Envíe los dispositivos a las instalaciones de SAS para reparaciones.

¡PELIGROS!
• NO permita que el cable entre en contacto con bordes metálicos, superficies filosas o abrasivas. NO envuelva el cable alrededor de ningún objeto.
• NO exponga el SRL a temperaturas altas, llama abierta, herramientas de corte o pulidoras, o fuentes eléctricas.
• Evite peligros de caídas tipo péndulo manteniendo el ángulo de servicio a menos de 40°.

ANTES DE CADA USO:
• Realice las pruebas de bloqueo y retracción como se especifica en el manual.
• Inspeccione y retire del servicio si se presenta alguna de las siguientes situaciones:
• No pasa las inspecciones o la prueba de bloqueo.
• El cable tiene cortes, dobleces, abrasión o hilos rotos.
• El indicador de caídas del gancho de seguridad está desplegado.
• Las carcazas o la manija están quebradas o rotas.
• Falta las etiquetas o no pueden leerse.

Almacenamiento, Mantenimiento, Uso:
• No permita que el cable se retraiga sin tensión, ya que esto provocaría daños graves.
• Cada seis meses debe ser revisado por una persona competente.

SRL Label F-7.1 Spanish ©SCN 02-2020 mfg. Taiwan [MIT]
Template: SRL 7.01

Fig.2A Casing Laser Marks

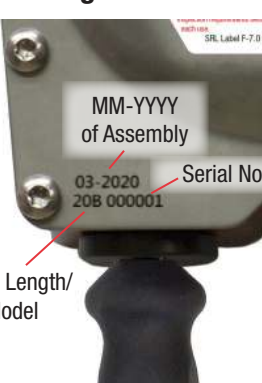


Fig.1A
SideWinder3
"A" end



"B" end