

## How to install visor to Safety Helmet

1. Remove the visor (item A) , 2 screws (item 1B & 2B), 2 internal plastic brackets (item 1C & 2C), and 2 external plastic brackets (item 1D & 2D) from bag.
2. Insert the left and right internal plastic brackets into the appropriate slot located on the inside of the helmet where the visor holes are. (image 2 )
3. Place the left and right external plastic brackets on the outside of the helmet where the pre-drilled visor hole is located. Make sure they fit over the brim of the helmet (image 2)
4. Place visor (tinted or clear) over the external plastic brackets. The tab on the external bracket will snap into the hole located on the inside of the visor.
5. Take 1 screw for the left and 1 screw for the right and thread it from the inside out (the head of the screw will be on the inside of the helmet). The screw will thread into the threads on the visor bracket. Do not over tighten, make sure its tight but not overly tight to where the visor cant swivel up and down.
6. After both screws are installed, you have successfully installed your visor.

IMAGE 1

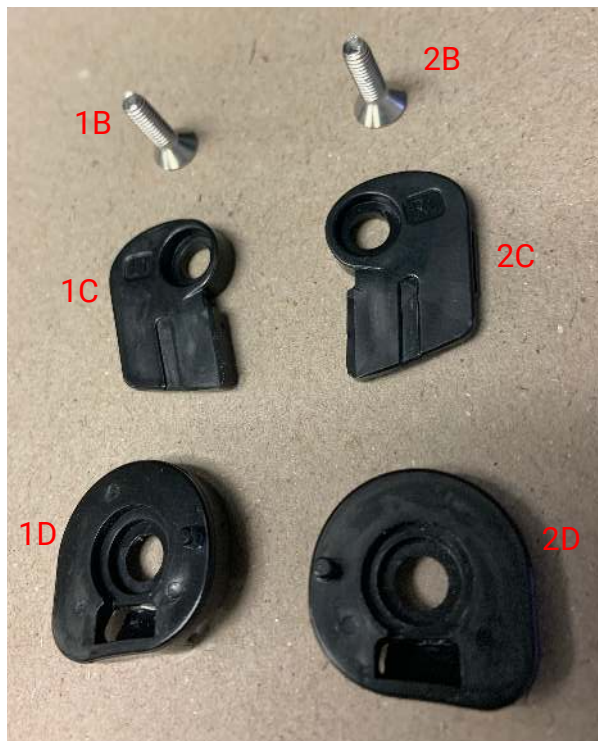


IMAGE 2

