




TranzSporter Hoist Stabilizer Assembly Instructions Part #48599

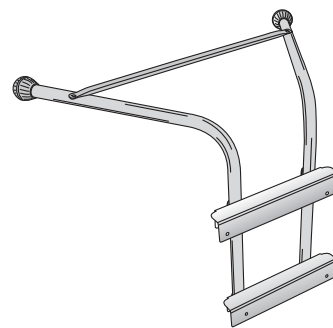

- For use with TranzSporter Platform Hoist LH200, LH2000 & TP250/400, prevents gutter damage on re-roof jobs!
- Easy to install, makes your hoist more stable and safe!
- Stabilizes your LH200/LH2000/TP250/TP400 hoist on roof or wall of house.

Step 1

Take one side rail (A) and slide bracket (B) into the upper position (see diagram on back). Note that there are 2 sets of square holes on the bracket flange for the bolts. The left side rail utilizes the farthest left round holes. Place 1/4" x 1.75" (C) bolt through and using washer (D) and nylon nut (E), hand tighten only. Repeat with the second bolt, washer and nut.

Step 2

Same procedure above adding the opposite side rail (A). Note again that there are 2 sets of round holes, the left side rail uses the farthest left holes and the right side uses the farthest holes to the right. Slide 2 of the 1/4" x 1.75" bolts (C) and hand tighten using washers (D) and nylon nuts (E).

Step 3

Slide the lower bracket (B) into the base of both side rails (A), using the same 1/4" x 1.75: bolts (C) hand tighten all four using washers (D) and nylon nuts (E).

Step 4

Attach the tie bar (F) over both side rails (A) using 1/4" x 1.75" Bolt (C). Use washer (D) and nylon nut (E), firmly tighten using 10 mm wrench. Do not over tighten.

Step 5

Make sure that the unit is square before firmly tightening all 8 nuts (E) using a 10 mm wrench. To square unit up, measure diagonally (corner to corner) and bolt to bolt from the upper bracket to lower bracket. If the measurements on each diagonal are the same, tighten nuts using 10 mm wrench. If they are not equal, pull on the left or right side rail until these measurements are equal.

Step 6

Slide bumper feet (G) onto the ends of the left and right side rail (A).

Installation of The Hoist Stabilizer with TranzSporter Platform Hoist

This unique stabilizer attaches exclusively to the TranzSporter Series* of roofing hoist allowing for proper stand-off from roof and gutter. *Excluding LH400


If the cable is already strung from the cable drum, to the top cap and down to the carriage, the tie bar (F) of the Hoist Stabilizer will need to be partially removed prior to installation. After the Hoist Stabilizer is positioned and pinned, the tie bar (F) must be re-installed and bolted firmly. The cable should be free and clear of pins and tethers, inspect for any interference. The Hoist Stabilizer can be moved vertically to the next rung pairs and re-pinned if necessary for proper stabilization.

Placement of the Hoist Stabilizer will depend on the height of the roof and positioning of the hoist. When installing, make sure that cable tethering pins are not tangled with hoist cable during installation.

Instructions #08131 (e1136 - Rev. 10/11/19)

TranzSporter Hoist Stabilizer Assembly Diagram

Part #48599

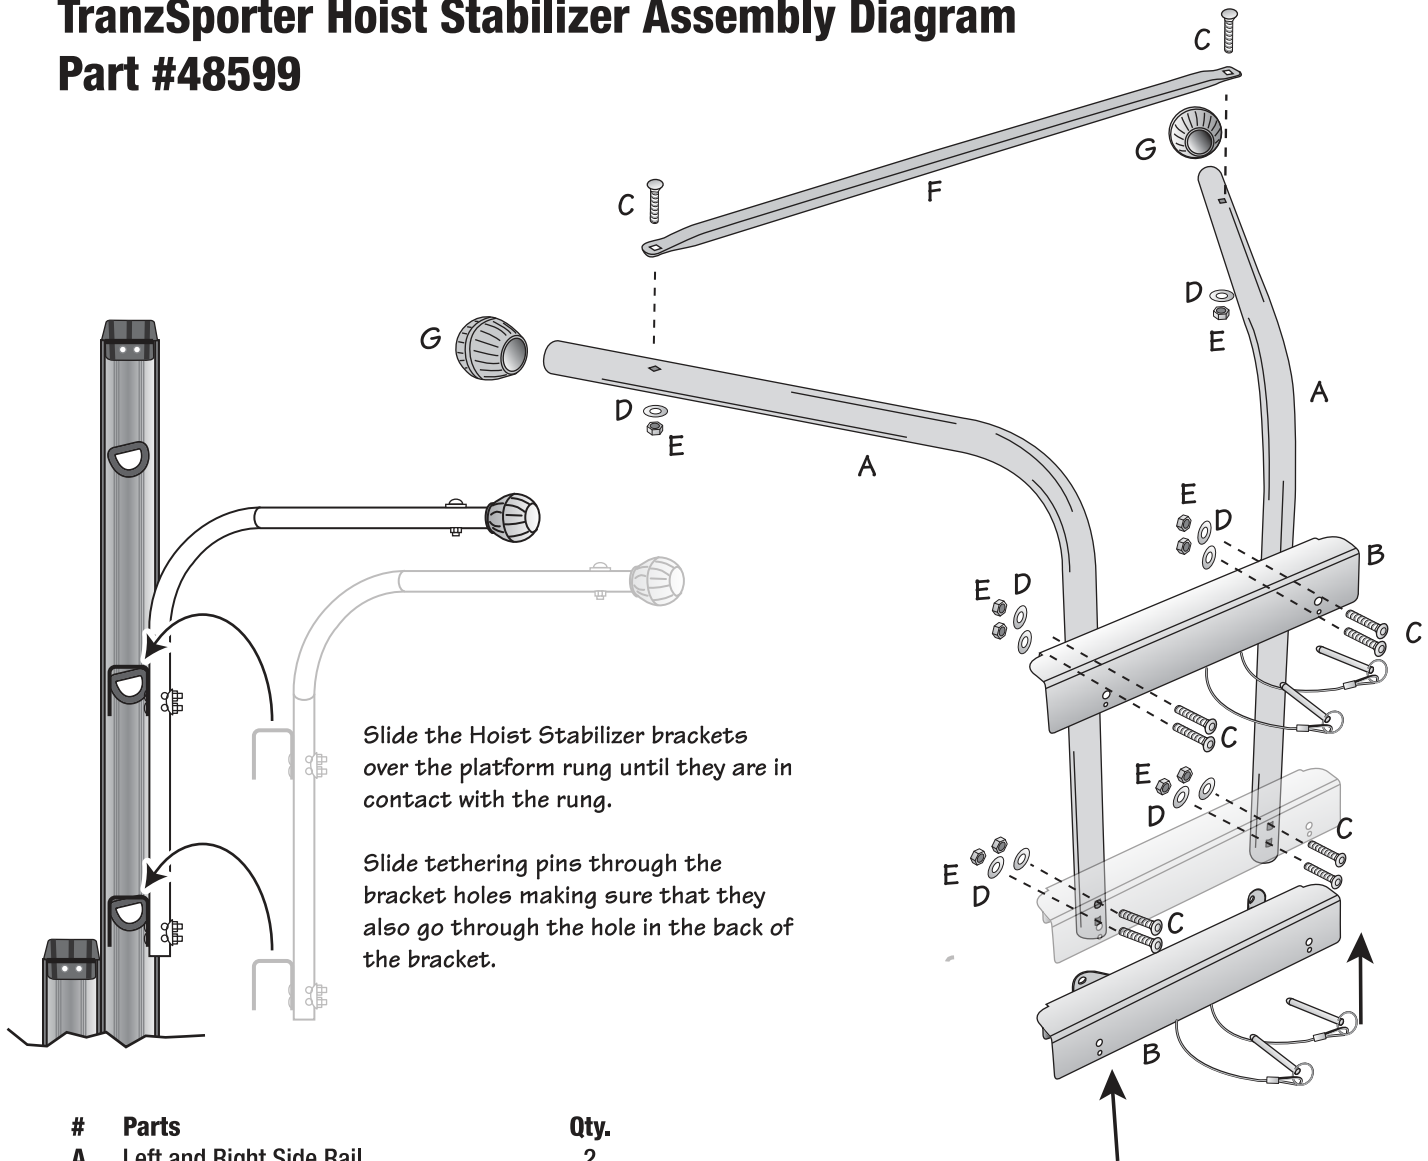

#	Parts	Qty.
A	Left and Right Side Rail	2
B	Upper and Lower Bracket w/Pins	2
C	1/4\"-20 x 1.75\" Carriage Bolts	10
D	Washer 1/4\"	10
E	Nylon Nut	10
F	Tie Bar	1
G	Non-Marring Bumper Feet	2

WARNING

- Never exceed maximum intended load of hoist
- Never stand on or use the tie bar to hold weight
- Use extreme caution and maintain balance when using Hoist Stabilizer
- Never use The Hoist Stabilizer if damaged or missing fasteners
- Always make sure that Hoist Stabilizer is secured with tethering pins prior to each use
- Stay 14 feet away from energized power lines

The Hoist Stabilizer is manufactured and tested to meet or exceed OSHA standards (1926.1053). The Hoist Stabilizer is designed for use with TranzSporter Platform Hoist models LH200, LH2000, TP250 and TP400 track sections. Warning: Failure to read instructions, as well as follow OSHA, local and State regulations may result in serious injury or death.